



QUICK START GUIDE

READ THIS FIRST

Verify Contents

Verify the contents of your system and make sure your computer meets the minimum system requirements before attempting installation.

 
Package Contents



PC600 Terminal




PC600 Proximity Badges

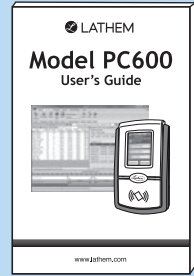


PC600 User's Guide



 
PayClock Software CD




RJ45 network cable

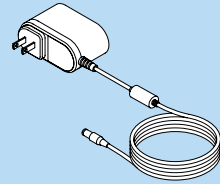 


Power Adapter

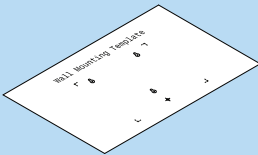 

Mounting Template

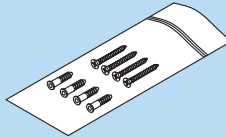 


Mounting Hardware

 

Security Bracket

 Tools Needed for Installation



Tape Measure



Pencil



Philips Head
Screw Driver

 


(Optional)
Power Drill


PC600 Setup Options

This Quick Start Guide is intended for Single Users installing on a Local Area Network (LAN). If you need to install the system using one of the other Setup Options please see the User's Guide.

Default Setup is Single User – Local Network

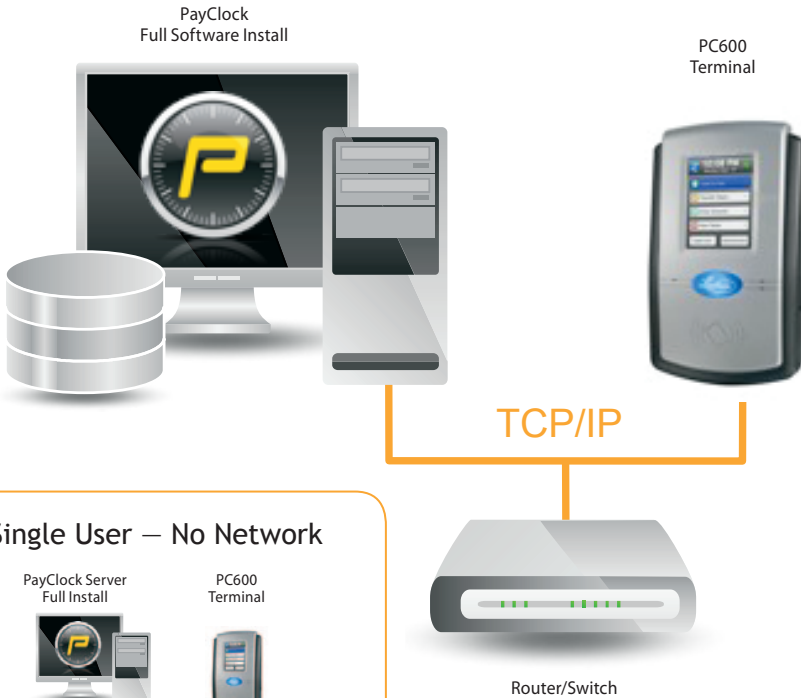


Single User – No Network

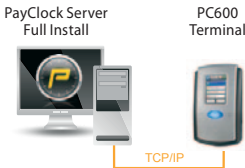 


See Appendix C in the User's Guide

 Multi-User – Local Area Network

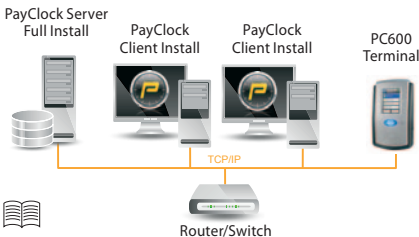

See "Setting up a Multi-User System" in the User's Guide

 Multi-User – Wide Area Network

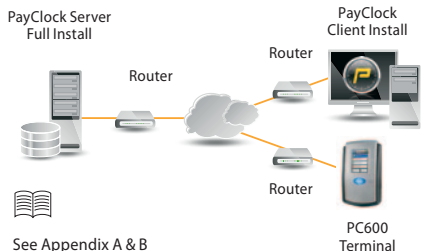


See Appendix A & B in the User's Guide

1

Getting Started



The following steps will show you how to connect the terminal, mount the terminal, install the system software, register the software, add employees and enable Multi-User if you choose.

 a Connect the Power and Ethernet Cables (before Installing Software)

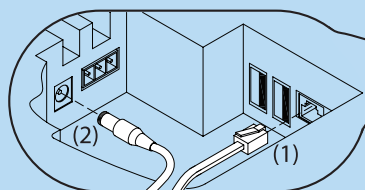

a. Plug the RJ45 network cable (1) into the Ethernet port and the Power Adapter plug (2) into the Power Adapter port which is located in the compartment on back of the terminal.

  
b. Plug the other end of the network cable into an available network jack, router or switch.

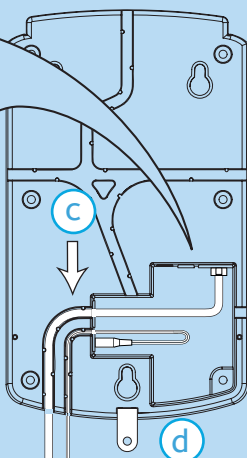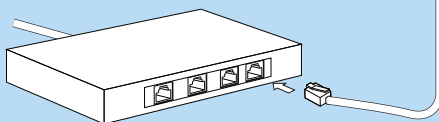


c. Route the cabling through the available channels to best suit your installation.

d. Insert "L" shaped security bracket into terminal as shown.

 NOTE: The power cord is 6 ft. long so take that into consideration before mounting.



e Mount Terminal

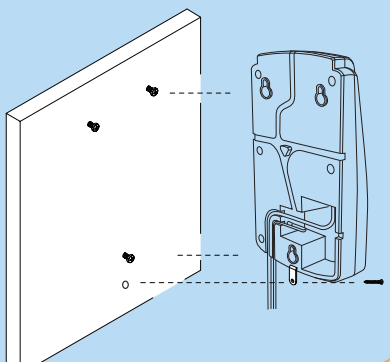 


- Use masking tape to hold the included mounting template onto the wall.
- The bottom of the terminal should be about 45 inches from the floor.
- Drill the holes using the template as a guide.
- Remove the template and install the mounting screws, using the plastic wall anchors if needed. Leave about 3/16" of the screw exposed.
- Hang terminal on wall, lowering onto screw heads.
- Insert screw into security bracket to lock terminal to wall.
- **Remove the clear label** from the lens on the front of the PC600 Terminal.

2

Install PayClock Software

 Go to the computer where you want to install the PayClock Software.
Make sure your screen saver is not showing before inserting the installation CD.
See User's Guide for detailed instructions.

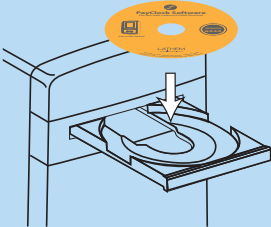

a. Insert the PayClock CD into the CD-ROM drive.



b. At the screen shown above click "**Next**".



c. Choose "**I accept**" and click "**Next**".



d. Choose "**Standard Install**" and click "**Next**".



e. At the screen shown above click "**Next**".



f. PayClock will now install and progress to the next screen when complete.



g. If the information on the Server Summary screen is correct, click "**Next**".



 
h. At the PC600 Setup screen click "**Start Discovery**".




i. When the discovery is complete the orange line will glow green. Click "**Next**".



j. PayClock defaults to open both the software and Help Manual. Click "**Finished**".

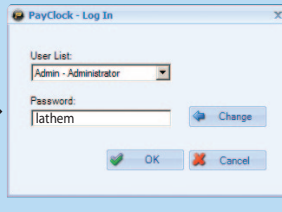

 k. PayClock has one default user: the **Administrator**. The default password is "**lathem**".

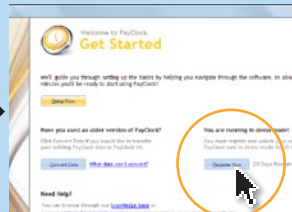


l. Click "**Register Now**". Complete all of the registration screens to continue setup.

3

Add Employees

 
Add employees and assign badges using the steps below.

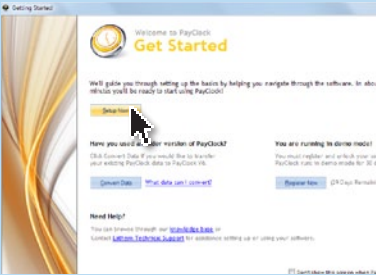


a. If an Update is available click **"Yes"**. When the update is complete you will be asked to re-enter your password then you should see the Get Started screen above. Click **"Setup Now"**.



 
b. The Setup screen above shows you how to navigate PayClock and indicates the categories in the lower left corner.

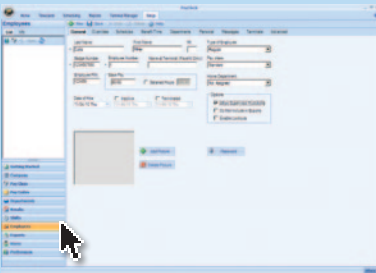

 
c. Click **"Employees"** located at the lower left corner of the screen.

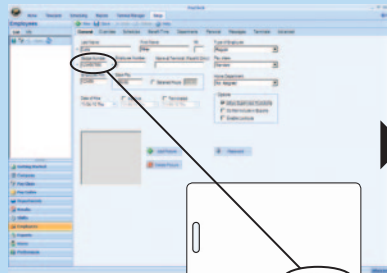

 d. Click **"New"** located at the top left corner of the screen. Then enter the employees data and their 10 digit badge number located on the back of the badge.

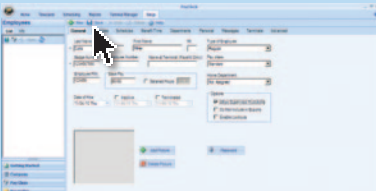

 
e. Click **"Save"** in the top left corner after entering each employee.

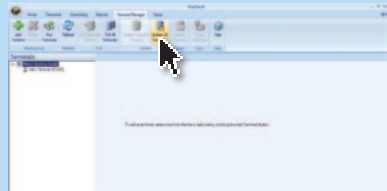


f. Once all of your employees have been added click the **"Terminal Manager"** tab located at the top of the screen. Then click **"Update All Terminals"**.

How to Enable Multi-User

 
This step is only necessary if you wish to enable Multi-User. PayClock is by default a Single User system. You must purchase and enable the Multi-User feature in order to access PayClock from other computers on your network. Please see the User's Guide for detailed instruction.

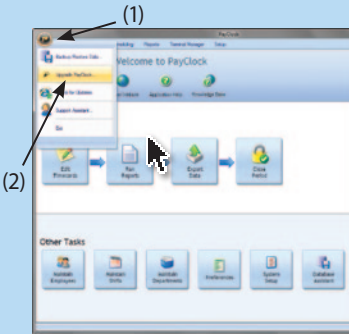

 
- a. Click on the PayClock orb (1) in the upper left hand corner and select "Upgrade PayClock" (2).

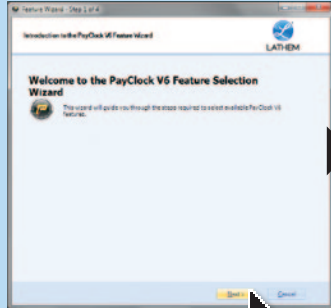

 
- b. The Feature Wizard will open, click "Next".

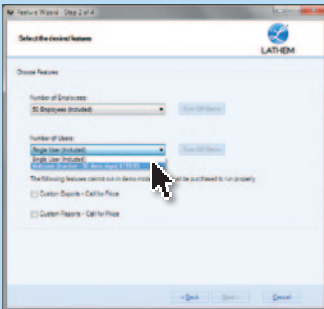

 - c. At Number of Users select "Multi-User" then click "Next".

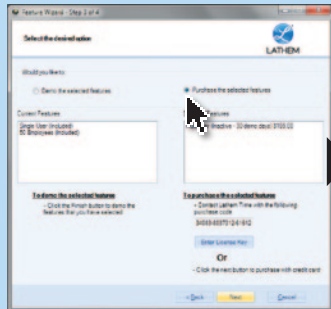

 - d. If you wish to purchase the feature select "Purchase the selected feature" and click "Next".

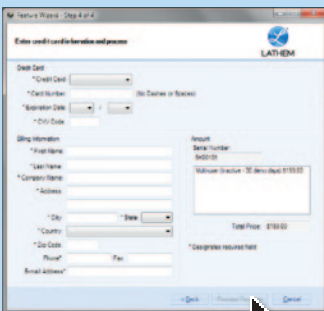

- e. Enter credit card information and click "Process Payment".

Your system will now be a Multi-User system. You can install the PayClock client on other company computers and access PayClock across the network.

See PayClock Help for detailed information on setting up additional PayClock users.

Purchase A Lathem Support Plan Today!

Protect your investment with a Lathem annual Support Plan...



- **Free updates and version upgrades**

While you are covered under the support plan, you will have availability to the latest versions of your software when they become available. New versions often have improved features designed to increase the functionality of the product, and make existing operations work easier.

Without the support plan: Software upgrades must be purchased individually.

- **Toll-free telephone support**

If you have any questions with the operation or support of your system, you will have access to a trained support representative via our toll free number. Our knowledgeable representatives are trained to answer your questions quickly and effectively, so you won't waste your time unnecessarily.

Without the support plan: Customer support calls will be billed on a per incident basis.

- **Next day shipping of exchange clock**

If your clock goes down, or is damaged, you can rest assured knowing that with a simple phone call, an exchange unit will be shipped out of our facility the next business day. This will dramatically reduce your "down time", allowing you to get back to business as usual, and process payroll on schedule.

Without the support plan: You must send in your clock for repair to be returned up completion.

- **Extended Warranty**

The support plan will extend the standard warranty that came with your product. While under warranty or this plan, your time clock will be covered for parts and labor to repair defects in materials or workmanship. If the problem with your clock is covered under this extended warranty, you can simply keep the exchange clock.

Without the support plan: Parts and labor are billed at standard rates.



LATHEM

To order online, visit shop.lathem.com
or call Lathem at **404-691-0405**.

200 Selig Drive S.W. • Atlanta, GA 30336 Made in U.S.A

Copyright © 2010 Lathem Time Corporation. PayClock, Lathem and the Lathem logo a reregistered trademarks of Lathem Time Corporation. Windows is a registered trademark of Microsoft Corporation.